# MASSAGE BATHTUB USAGE MANUAL D-8176




# CATALOGUE

1.	The note before usage	2
2.	Electrical parameters	2
3.	Electrical Installation	3
4.	Power supply facilities	3
5.	Installation instructions	3
6.	Usage method	4
7.	Water velectricity diagram	5
8.	Cleaning and maitenance	6
9.	Special tips	6

# 9. Special tips

- The product should be installed by qualified electrcian according to manual.
- Strictly prohibit t to star the water pump without water ,pump should be off before drainage .
- A child ,old man without self-care ability mustn't use it alone .
- To take a massage bath ,water temperature should not be higher than the mean body temperature , the best temperature is 32-37°C.
- The power should be off after bath .

Atenttion: The company reserve the right to modify products, it is subject to change without notice.

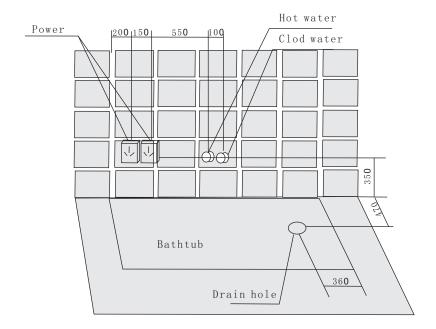

# 8. Cleaning and maitenance

- Daily cleaness of jacuzzi can use ordinary liquid detergen tand soft cloth ,never use detergent composition of ketoneand ammonia , and disinfection never use disnfectant with formaldehyde .
- Toothpast and soft cloth can be used to rub the blot of tub surface .
- Mild abrasion and cigarette burning of tub surface can be polished with the No.2000# sandpaper and water, combination of toothpaste and a soft cloth.
- The Chrome parts dirt can be cleaned carefully with a soft cloth, not the coarse cloth and the other chemical solution.
- The rewater network should be cleaned regularly to prevent blockage.
- In order to ensure tub use ,water pipe should be checked wether rupture or fold without day .
- To check regularly the power cord ,switch ,plug wether off or damaged ,so that maitence timely .
- In order to extend the life of jucuzzi ,please do not use it continousely over than 3 hours at most .

### 1. The note before usage

#### Attention

- Please read the instructions carefully so that you use the products safely and correctly.
- For your renference in the future, when you read this manual ,please keep it well

#### Using guidance

- Before the power is on ,please make sure that the groudwire and power lines have been completely corect link.
- If it is a long time not to use the product ,please pull the power plug from the shocket.

#### Usefull tips

- In order to extend the products life ,the time interval between turn on and close down continuously must be over 30 seconds .
- The use voltage muse be identical with the product voltage ,otherwise ,it will lead to circuit failure or damage the product.
- If it breaks down by chance, please disconnect the power supply, and restart it after 5 seconds.

# 2. Electrical parameters

Model	Voltage/Hertz	Power
D-8176	AC220V <u>+</u> 10%/50HZ	Water pump(1HP)

#### 3. Electrical Installation

- Power facilities should be consistent with national safety standards, power supply voltage and herz should be beidentical with the product pump.
- The power to connect the massage bathtub shall be permanently fixed cables, and power cord is three-core cord, each core crosssectional area is not not less than 3mm²(3\*3mm²), when the power

cord through the wall, it shoul be with the protective sleeve of galvanized snake until the power outlet.

- To connect the groud wire of massage bathtub to the house and verify
- Power must be connected to a dedicated power supply line, it should be shut down after use

# 4. Power Supply Facilities

- The water supply pressure is 0.2 Mpa-0.4Mpa, interface for hot and cold water is G1/2".
- The water supply point used in the massage bathtub should be located in the bathtub where is easy to shield, connect the massage faucet through hose, the direction of wate pipe is up to user.
- The water pipe must be equipped with independent water valve ,water source should be shut down after use .

#### 5. Installation instructions

- Before installation, the carring capacity of jacuzzi location for weight of tub and full-water tub should be taken into consideration.
- To putjacuzzi on the installation position, and adjust anchor screw to make tail touchdown, at the same time adjust the level of degree so that it is easy to water drain.
- To splice the cold and hot water inlet tub, shower and drain pipe, connector should be with water protection.
- To plug creepage protection device and check wether it is on work by hand, if it is, power up, and then it off and on

 
# 6. Usage method


- Water injection: to revolve cold and hot water switch, adjust water temperature to appropriciate degree, and then press water pump after water is higher than nozzle 10-20mm.
- Water massage: to start up water pump, spaying nozzle is fountain, revolve and start up strenth swicth by counter clockwise, which is

- available to adjust the strenth of nozzle fountain, also for single nozzle, the strenth is up by clockwise otherwise down even off.
- Air massage :to press air pump ,the bubble nozzle of tub bottom sprays continous air bubble.
- Shower: to revolve change-over switch to water out from hand shower, and then take a shower.
- Close down:to press water pump and air pump switch again to stop water and air pump, and then revolve drainer to drain out water from tub, what's more clean tub with water.

# 7. Water、electricity diagram

Model:D-8176



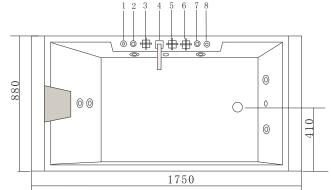

- 1. Water pump
- 2. power switch
- 3. Hot water switch
- 4. Water-inlet
- 5. Change-over switch
- 6. Clod water switch
- 7. Shower holder
- 8. Air pump